

How To Leakdown a Barrel Valve


- 1. Adjust Butterflies Air Gap*
- 2. Block off all injector hat return lines except for the hat nozzles*
- 3. Connect dual gauge tester to outlet of compressor*
- 4. Set air compressor to read 0 on the second gauge*
- 5. Connect tester to inlet of barrel valve*
- 6. Read % leakage on 2nd gauge*
- 7. Adjust linkage turnbuckle on barrel valve for desired leakage*



Note: First gauge is only utilized if air inlet supply is less than 100psi



*Scan here for video
instructions*

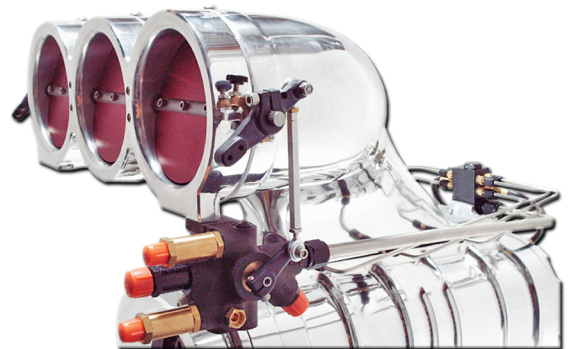

Toll Free Tech 800.576.7661

www.DragParts.com