


SINGLE B-FLY INJECTOR DIAGRAM

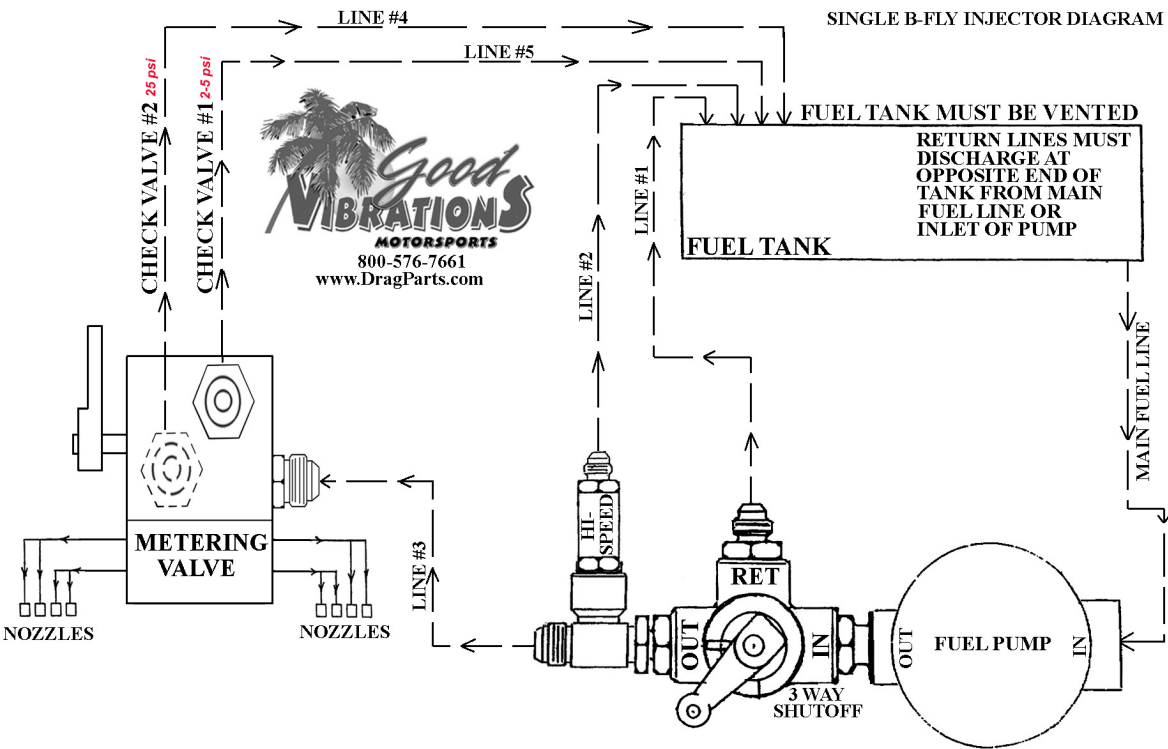

Good VIBRATIONS
MOTORSPORTS
800-576-7661
www.DragParts.com

FUEL TANK MUST BE VENTED
RETURN LINES MUST DISCHARGE AT OPPOSITE END OF TANK FROM MAIN FUEL LINE OR INLET OF PUMP

FUEL TANK

CHECK VALVE #2 25 psi
CHECK VALVE #1 2-5 psi

METERING VALVE

NOZZLES

NOZZLES

HI-SPEED

RET

3 WAY SHUTOFF

FUEL PUMP

LINE #4

LINE #5

LINE #2

LINE #1

LINE #3

MAIN FUEL LINE