


On-Board Priming System Instructions

Kit Includes: AN4 Primer Check Valve, 5ft AN4 Hose, One Straight Hose End, Four Hose Clamps, 12V Electric Pump and a Stainless Steel or Black Poly Reservoir.

1. Mount the AN4 Primer Check Valve in Distribution Block.
2. Mount the reservoir and fuel pump. The electric pump produces 4psi so keep it close to the injection hat and reservoir.
3. You can now plumb the priming system.
4. Wire the fuel pump to a 12 Volt source. Use a momentary switch to control the on/off of the primer pump. (Sold Separately)
5. Before Starting the car hit the primer switch for 2-3 seconds and then fire the car. After the car is fired continue priming for an additional 3-4 seconds until you hear a change in engine pitch.
6. We recommend priming most alcohol systems with gas.

Tips


- Do not install primer valve directly into the hat, the vacuum will open the valve.
- The Primer valve opens at 4psi. If it doesn't open with our 12V pump try lubricating the ball of the valve or cut a coil off the spring to reduce the pressure.

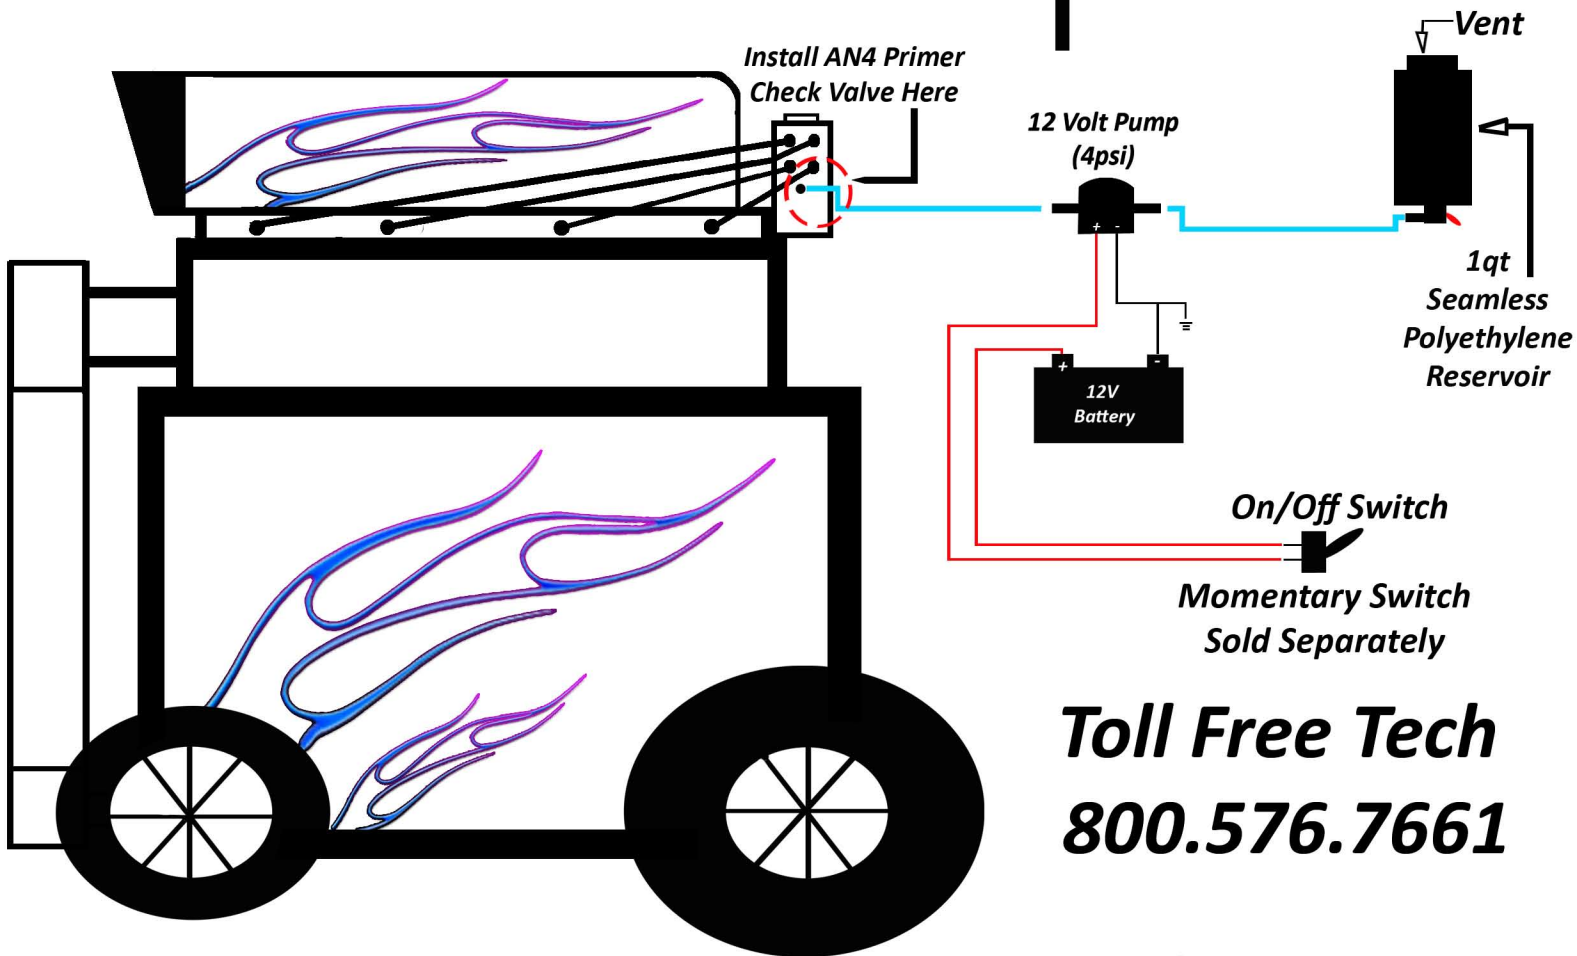

Toll Free Tech
800.576.7661



Scan Me! To order
your on-board
Priming System

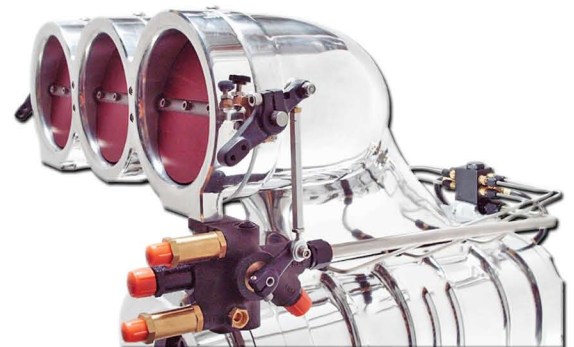

Empowering Racers Since 1989

www.DragParts.com